


DIPSTICK Exchange

CONNECTION



Connect battery cables to vehicle's battery.

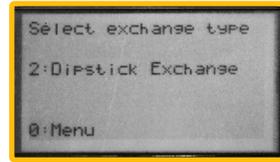

Press **2** for **Dipstick Exchange**

OPERATION




Connect red and gray service hoses to chrome manifold.

Insert nylon tube down dipstick tube the same length as the dipstick, being cautious not to insert too far.



With the **engine off**, use the arrow keys to select the desired amount to be exchanged.

Press to proceed. Press again to begin exchange.

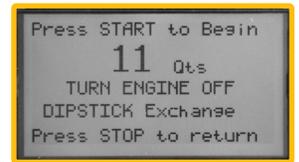

Start the vehicle's engine when display prompts you to do so.


Press . Once exchange is finished the screen will beep and display "Complete".





ADDITIONAL FEATURES



If needed, while running, pressing once will pause the machine. Press to resume from pause, or press a second time to cancel the exchange

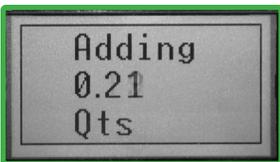

Check the fluid level. Press or to add or remove fluid in 2/10 of a quart increments. Use **option 3** in the main menu to add a full quart and **option 4** to remove a full quart.

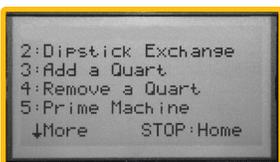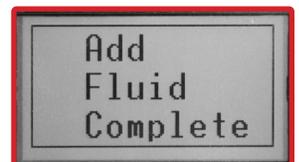


Press to return to the main menu.

Quick Start Instructions: **Additional Functions**

MAIN MENU




Connect battery cables to vehicle's battery.

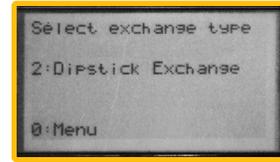


Press **0** for **Main Menu**

PRIMING THE MACHINE

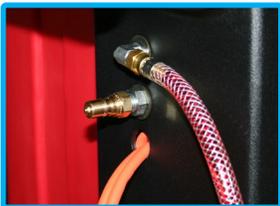

Make sure there is fluid in the New Fluid Tank. Connect the red service hose to the fitting on the left side of the machine.

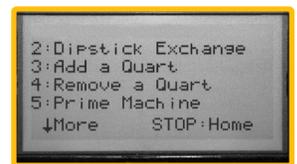

Press **5** JKL. Press **ENTER START RESUME** to begin the process.
The unit will shut off when complete.





DRAINING THE TANKS




Connect any open end adapter to **red hose** and insert into appropriate disposal container.


Make sure all other hoses are disconnected!

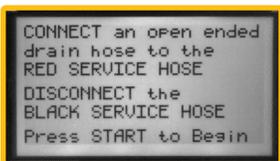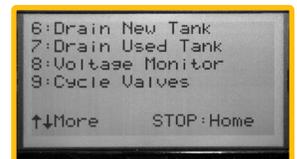


From the Main Menu, press **▼** to proceed to the next menu.
Press **6** MNO to drain the **New Fluid Tank**. Press **7** PQRS to drain the **Used Fluid Tank**. Press **ENTER START RESUME** to begin the process.
The unit will shut off when complete.

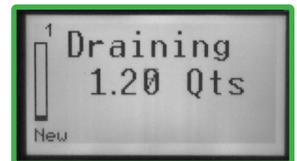


VOLTAGE MONITOR

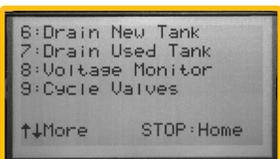

From the Main Menu, press **▼** to proceed to the next menu.
Press **8** TUV to display the voltage.

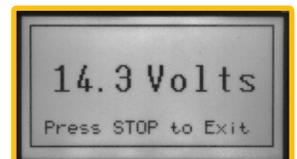

FILTER CHANGE DUE

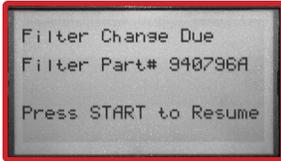

The machine will indicate when the canister filters need to be replaced. Remove service panel. Use a standard filter band clamp tool to unscrew old filters, and replace them with new filters. Make sure new filters are on tight.




IMPORTANT: Machine must be primed after filter change.

TOTAL FILTER USE




From the Main Menu, press  twice.

Press  to display the total filter use. Press  to reset.

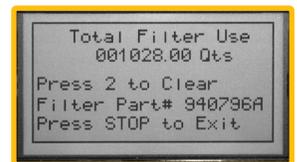

POWER FAILURE MEMORY

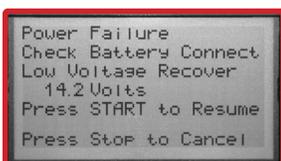


If there is a power failure during a transmission fluid exchange, the procedure can be continued seamlessly.

Simply reconnect the battery cables, and press .

The exchange will resume where it left off.



CYCLE VALVES

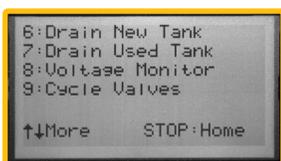

From the Main Menu, press  to proceed to the next menu.

Press  to cycle the valves.

